



### **Functions:**

- 1 Minute hand
- 2 Hour hand
- 3 Second hand
- 4 Date Indicator

# 5 Winding crown

- Manual Wind: unscrew, not pull
- · Position B: date setting
- · Position C: time setting, hacking sec

## Setting the Time:

To set the time, unscrew the screw-down crown (5) pull out into position – C, and turn the crown counter-clockwise. At the "C" position, the hacking feature will have the second hand and movement stopped completely for time synchronization. By pressing the crown back to "A" or "B" positions, the watch will then be set back into motion.

## Setting the Date:

# IMPORTANT NOTICE:

Date correction is not recommended when the Hour Hand is between 8 pm and 2 am. This can cause serious damage to the gears of the internal movement! Such damage is not covered under the warranty.

To change the Date, unscrew the screw-down crown (5) pull out into position – B, and turn clockwise to adjust the Date.

#### Manual wind:

To manually wind the watch, unscrew the screw-down crown (5), not pull, in position – A, and turn the crown clockwise  $15 \sim 20$  times.

#### Care and Maintenance:

We would advise you to clean your watch regularly using a soft cloth and lukewarm soapy water. After immersion in salty water, rinse it in fresh water and leave it to dry completely. Do not leave it anywhere that subjects it to high variations of temperature or humidity, direct sunlight or strong magnetic fields.