

## VOLARE (SEIKO SII NH34A Caliber) Operating Instructions



### Functions:

- |  |  |
|--|--|
| <p>1 Minute hand</p> <p>2 Hour hand</p> <p>3 Second hand</p> <p>4 GMT hand</p> <p>5 Rotating Bezel</p> | <p>6 Winding crown</p> <ul style="list-style-type: none"> <li>• Manual Wind: unscrewed, not pulled</li> <li>• Position B: Clockwise - GMT hand setting</li> <li>• Position B: Counter-clockwise - date setting</li> <li>• Position C: time setting, hacking sec</li> </ul> <p>7 Date Indicator</p> |
|--|--|

### Setting the Time:

To set the time, unscrewed the screw-down crown (6) pull out into position – C, and turn the crown counter-clockwise. At the “C” position, the hacking feature will have the second hand and movement stop completely for synchronizing the time, the watch will set back in motion by pressing the crown back to “A” or “B” positions.

### Setting the Date:

#### IMPORTANT NOTICE:

Date correction is not recommended when the Hour Hand is between 8 pm and 2 am. This can cause serious damage to the gears of the internal movement! Such damage is not covered under the warranty.

To change the Date, unscrewed the screw-down crown (6) pull out into position – B, and turn counter-clockwise to adjust the Date.

### Setting the GMT Time:

To set the GMT time, unscrewed the screw-down crown (6) pull out into position – B, and turn clockwise to for quick GMT hand correction.

### Manual wind:

To manually wind the watch, unscrewed the screw-down crown (6), not pulled, in position – A, and turn the crown clockwise 15 ~ 20 times.

### Care and Maintenance:

We would advise you to clean your watch regularly using a soft cloth and lukewarm soapy water. After immersion in salty water, rinse it in fresh water and leave it to dry completely. Do not leave it anywhere subjected to high variations in temperature or humidity, direct sunlight or strong magnetic fields.